

American Auto Shield

The following is a general representation of coverage.
Please consult your contract for specific coverage details, you obligations, and exclusions.

Electric Vehicle

Component Group	Part Description	Included	Contract Reference
AIR CONDITIONING	A/C HEATING OUTLET/DUCT	√	
	A/C LINES	√	
	AC COMPRESSOR CONTROL MODULE	√	
	ACCUMULATOR/RECEIVER DRYER	√	
	AIR CONDITIONING DIAGNOSTIC	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	AUTO HEATER/AC CONTROL HEAD ASSY	√	
	AUTO-CLIMATE CTRL PROGRAMMER	√	
	BLEND DOOR ACTUATOR	√	
	BLEND DOOR CABLE	√	
	BLEND DOOR CASE	√	
	BLOWER MOTOR	√	
	BLOWER MOTOR RELAY	√	
	BLOWER MOTOR RESISTOR	√	
	CLIMATE CONTROL MODULE	√	
	COMPRESSOR	√	
	COMPRESSOR CLUTCH(S)		
	COMPRESSOR PULLEY		
	CONDENSOR	√	
	DRIVER TEMPERATURE SENSOR	√	
	EVACUATE AND RECHARGE	√	ONLY IF REQUIRED FOR COVERED REPAIR
	EVAPORATOR	√	
	EVAPORATOR CORE CASE	√	
	EVAPORATOR FAN (DEDICATED)	√	
	EVAPORATOR/REFRIGERANT TEMPERATURE SENSOR	√	
	EXPANSION VALVE	√	
	GASKET(S) standalone	√	
	GASKET(S)-ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	HEATER/AC BLOWER SPEED SWITCH	√	
	HIGH/LOW CUT-OFF SWITCH OR PRESSURE SWITCH	√	
	HOSE(S)	√	
	IDLER PULLEY		
	INTERIOR TEMPERATURE SENSOR	√	
MANUAL HEATER/AC CONTROL HEAD ASSEMBLY	√		

	ORIFICE TUBE	√	
	PASSENGER TEMPERATURE SENSOR	√	
	PRESSURE CYCLING SWITCH	√	
	REFRIGERANT - ONLY IF NEEDED FOR REPAIR	√	ONLY IF REQUIRED FOR COVERED REPAIR
	REFRIGERANT -OIL ONLY IF NEEDED FOR REPAIR	√	ONLY IF REQUIRED FOR COVERED REPAIR
	REFRIGERANT PRESSURE SENSOR	√	
	SEAL(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	SEAL(S) standalone	√	
BRAKES	ABS ACCUMULATOR	√	
	ABS ELECTRONIC CONTROL PROCESSOR	√	
	ABS GASKET(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	ABS GASKET(S) standalone	√	
	ABS HYDRAULIC PUMP/MOTOR ASSEMBLY	√	
	ABS PRESSURE MODULATOR VALVE	√	
	ABS RELAY	√	
	ABS WHEEL SPEED SENSOR - LEFT FRONT	√	
	ABS WHEEL SPEED SENSOR - LEFT REAR	√	
	ABS WHEEL SPEED SENSOR - RIGHT FRONT	√	
	ABS WHEEL SPEED SENSOR - RIGHT REAR	√	
	Brake Adjuster	√	
	BRAKE CALIPER - LEFT FRONT	√	
	BRAKE CALIPER - LEFT REAR	√	
	BRAKE CALIPER - RIGHT FRONT	√	
	BRAKE CALIPER - RIGHT REAR	√	
	BRAKE CALIPER KIT	√	
	BRAKE DIAGNOSTIC	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	BRAKE DRUMS		
	Brake Lines	√	
	BRAKE MASTER CYLINDER	√	
	BRAKE PAD WEAR SENSOR	√	
	BRAKE PADS		
	BRAKE PEDAL SENSOR	√	
	BRAKE PEDAL SWITCH	√	
	BRAKE ROTORS		
	ELECTRIC BRAKE BOOST PUMP/MOTOR	√	
	EMERGENCY BRAKING/COLLISION SENSOR/RADAR/CAMERA	√	
	GASKET(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	GASKET(S) standalone	√	
HYDRAULIC FITTING(S)	√		

HYDRAULIC LINE(S)	√	
LATTERAL ACCELEROMETER	√	
PARKING BRAKE ACTUATOR	√	
PARKING BRAKE CABLES/LINKAGE	√	
PARKING BRAKE MODULE	√	
PARKING BRAKE SWITCH	√	
POWER BRAKE CYLINDER	√	
PROPORTIONING/COMPENSATING VALVE	√	
SEAL(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
SEAL(S) standalone	√	
TRACTION CONTROL SWITCH	√	
VACUUM ASSIST BOOSTER PUMP		
VACUUM BOOST PUMP		
Wheel Cylinder Left Front	√	
Wheel Cylinder Left Rear	√	
Wheel Cylinder Right Front	√	
Wheel Cylinder Right Rear	√	
YAW RATE SENSOR	√	
AXLE HOUSING	√	ONLY IF DAMAGED BY INTERNALLY LUBRICATED COMPONENT
BEARING(S)	√	
CARRIER BEARING(S)	√	
CARRIER(S)	√	
CENTER SUPPORT BEARING(S)	√	
CRUSH SLEEVE	√	ONLY IF REQUIRED FOR COVERED REPAIR
CV BOOT - LEFT INNER	√	
CV BOOT - LEFT OUTER	√	
CV BOOT - RIGHT INNER	√	
CV BOOT - RIGHT OUTER	√	
CV HALFSHAFT COMPLETE - LEFT	√	
CV HALFSHAFT COMPLETE - RIGHT	√	
CV JOINT - LEFT INNER	√	
CV JOINT - LEFT OUTER	√	
CV JOINT - RIGHT INNER	√	
CV JOINT - RIGHT OUTER	√	
DIFFERENTIAL AXLE COMPLETE	√	HOUSING ONLY IF DAMAGED BY INTERNALLY LUBRICATED COMPONENT
DIFFERENTIAL CONTROL MODULE		
DIFFERENTIAL COVER		
DRIVE AXLE	√	
DRIVE AXLE DIAGNOSTIC	√	FOR FAILURE OF COVERED COMPONENTS ONLY

DRIVE AXLE	DRIVE SHAFT		
	FLUIDS - ADDITIVE	√	ONLY IF REQUIRED FOR COVERED REPAIR
	LOCKING DIFFERENTIAL ACTUATOR/MOTOR		
	LOCKING DIFFERENTIAL SWITCH		
	LOCKING HUBS		
	PINION BEARING(S)	√	
	PINION CONE(S)	√	
	PINION CUP(S)	√	
	PINION FLANGE(S)		
	PINION GEAR(S)	√	
	PINION NUT(S)	√	ONLY IF REQUIRED FOR COVERED REPAIR
	PINION RACE(S)	√	
	SEAL(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	SEAL(S) standalone	√	
	SEALER/SILICONE ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	SEALER/SILICONE standalone	√	
	SHAFT BEARING(S)	√	
	SHAFT(S)	√	
	SHIM KIT		
	SHIM(S)		
SIDE GEAR(S)			
SPACER(S)	√		
UNIVERSAL JOINTS(S)			
YOKE			
FOUR WHEEL DRIVE ACTUATOR *** TRANSFER CASE ***			
ALTERNATOR			
COIL/ COIL PACKS			
COOLANT LEVEL SENSOR	√		
COOLANT TEMP SENSOR	√		
COOLING FAN MOTOR	√		
COOLING FAN RELAY	√		
COOLING FAN SWITCH			
CRANKSHAFT POSITION SENSOR			
DISTRIBUTOR			
ECM -PCM(ENGINE OR POWER CONTROL MODULE)	√		
ENGINE CAMSHAFT POSITION SENSOR			
ENGINE CRANKSHAFT POSITION SENSOR			
ENGINE WIRING HARNESS			
IGNITION CONTROL MODULE			

IGNITION LOCK CYLINDER SWITCH		
IGNITION SWITCH	√	
IGNITION SWITCH HOUSING	√	
IGNITION SWITCH LOCK CYLINDER	√	
IGNITION SWITCH SPRING	√	
KNOCK SENSOR		
O2 SENSOR		
OIL GAUGE		
OIL PRESSURE SENDING UNIT		
POWER TRAIN CTRL MOD/ECM(EMIS)		
STARTER DRIVE		
STARTER MOTOR		
STARTER SOLENOID		
TEMP GAUGE IF SERVICE SEPARATE	√	
VOLTAGE REGULATOR	√	
BODY CONTROL MODULE	√	
CLOCKS/COMPASS	√	
CRUISE CONTROL AMPLIFIER	√	
CRUISE CONTROL MODULE	√	
CRUISE CONTROL SERVO	√	
CRUISE CONTROL SWITCH	√	
DOOR CLOSING MOTOR	√	
DOOR SWITCH	√	
ELECTRICAL DIAGNOSTIC	√	FOR FAILURE OF COVERED COMPONENTS ONLY
ELECTRONIC INSTRUMENT CLUSTER	√	
FLASHER SWITCH - TURN SIGNAL SWITCH	√	
FRONT WINDOW WIPER MOTOR	√	
FUEL DOOR ACTUATOR - ELECTRIC ONLY		
FUSE BLOCK/ BREAKER	√	
HAZARD SWITCH	√	
HEADLAMP ASSEMBLY		
HEADLAMP DOOR MTR.	√	
HEADLAMP SWITCH	√	
HORN CLOCK SPRING		
MODULE FACTORY ALARM CONTROL	√	
NEUTRAL SAFETY SWITCH	√	
PASS LOCK SENSOR	√	
POWER DR. LOCK ACTUATORS	√	
POWER DR. LOCK SWITCH	√	

ELECTRICAL

POWER MIRROR MTR.	√	
POWER MIRROR SWITCH	√	
POWER WINDOW MTR.	√	
POWER WINDOW SWITCH	√	
PULSE WIPER MODULE	√	
REAR WINDOW DEFOGGER SWITCH	√	
REAR WINDOW WIPER MOTOR	√	
REARVIEW MIRROR ASSEMBLY	√	
RESISTOR(S)	√	
SLIDE DOOR MOTOR ASSEMBLY	√	
SLIDING DOOR MODULE	√	
STOP LAMP SWITCH	√	
TAIL LIGHT ASSEMBLY		
TAIL LIGHT CIRCUIT BOARD		
TEMP SENSOR (EXTERNAL AND AMBIENT SENSOR)	√	
TRUNK RELEASE ACTUATOR - ELECTRIC ONLY	√	
TRUNK RELEASE ACTUATOR/ PULLDOWN MOTOR	√	
TURN SIGNAL FLASHER RELAY	√	
TURN SIGNAL SWITCH	√	
WINDOW REGULATOR(S)	√	
WIPER MODULE	√	
WIPER SWITCH	√	
WIRING HARNESS ALL	√	
AUTO DIMMING SIDE/REARVIEW MIRRORS	√	
BLIND SPOT SENSORS/RADARS	√	
CIGARETTE LIGHTER ELEMENT		
CONVERTIBLE TOP CONTROL MODULE	√	
CONVERTIBLE TOP HYDRAULIC CYLINDERS	√	
COOLED SEAT FAN/COOLING MODULE	√	
COOLED/HEATED CUP HOLDERS	√	
ELECTRONIC DRIVER INFORMATION DISPLAY	√	
ELECTRONIC DRIVER INFORMATION MODULE	√	
FRONT VIEW PARKING CAMERA AND SENSORS	√	
HEADS UP DISPLAY	√	
HEATED ARMREST	√	
HEATED STEERING WHEEL	√	
INDUCTIVE CELL PHONE CHARGER	√	
INFRARED SYSTEM(S)	√	
LANE DEPARTURE SENSOR/CAMERA	√	

ON BOARD COMMUNICATIONS SYSTEM	√	
OVERHEAD VIEW CAMERAS	√	
PERIMETER WARNING SYSTEM	√	
POWER ADJUSTABLE PEDAL MOTOR/ASSEMBLY	√	
POWER ADJUSTABLE PEDAL SWITCH	√	
POWER FOLDING MIRROR	√	
POWER FOLDING SEAT MOTOR	√	
POWER HATCH/LIFTGATE MOTION SENSOR	√	
POWER HATCH/LIFTGATE MOTOR/ASSEMBLY	√	
POWER HEADREST MOTOR/MODULE	√	
POWER HEADREST SWITCH	√	
POWER LUMBAR PUMP/MOTOR	√	
POWER SEAT MTR.	√	
POWER SEAT SWITCH	√	
POWER TAILGATE MODULE	√	
POWER TAILGATE MOTOR	√	
REFRIGERATOR	√	
SEAT HEATER SWITCH	√	
SEAT MASSAGER MOTOR/ASSEMBLY	√	
SEAT RECLINER ASSEMBLY ELECTRIC	√	
TAILGATE LOCK ACTUATOR	√	
TELEVISION (EXCLUDES PLASMA TV)		
THERMAL IMAGING CAMERA	√	
Tire Pressure Monitor / Sensor		
VENTED SEAT FAN	√	
GLOW PLUG CONTROLLER		DIESEL ONLY
CONVERTIBLE TOP MTR	√	LUXURY ELECTRONICS PACKAGE
DVD PLAYERS	√	LUXURY ELECTRONICS PACKAGE
DVD/VCR/VOICE ACTIVATION	√	LUXURY ELECTRONICS PACKAGE
GLOBAL POSITIONING SYSTEM (GPS)	√	LUXURY ELECTRONICS PACKAGE
INTEGRATED RADIO/GPS	√	LUXURY ELECTRONICS PACKAGE
LIQUID CRYSTAL DISPLAYS (LCD)	√	LUXURY ELECTRONICS PACKAGE
PARKING SENSORS	√	LUXURY ELECTRONICS PACKAGE
POWER SUNROOF MTR.	√	LUXURY ELECTRONICS PACKAGE
RADIO/GPS/NAV COMPONENTS	√	LUXURY ELECTRONICS PACKAGE
RADIO/TAPE PLAYER/CD PLAYER	√	LUXURY ELECTRONICS PACKAGE
REARVIEW BACK-UP CAMERA AND SENSORS	√	LUXURY ELECTRONICS PACKAGE
SEAT HEATER ELEMENT	√	LUXURY ELECTRONICS PACKAGE
SEAT HEATERS	√	LUXURY ELECTRONICS PACKAGE

	SUNROOF/PANORAMIC ROOF AND COVERTIBLE TOP MOTORS	√	LUXURY ELECTRONICS PACKAGE
	VOICE ACTIVATION SENSORS	√	LUXURY ELECTRONICS PACKAGE
AUDIO	ANTENNA ASSEMBLY	√	
	POWER ANTENNA ASSEMBLY	√	
	POWER ANTENNA MAST	√	
	POWER ANTENNA MTR.	√	
	RECEIVER	√	
	SD CARD/USB PORT/READER FOR AUDIO SYSTEM	√	
	SPEAKERS		
EMISSION	DIESEL EMISSION FLUID HEATER		
	DIESEL EMISSIONS CATALYST (CAT CONVERTER)		
	DIESEL EMISSIONS FLUID INJECTOR		
	DIESEL EMISSIONS FLUID LEVEL SENSOR		
	DIESEL EMISSIONS FLUID PUMP		
	DIESEL EMISSIONS FLUID TANK		
	DIESEL PARTICULATE EMISSIONS FILTER		
	DIESEL PARTICULATE FILTER FUEL INJECTOR		
	DIESEL PARTICULATE FILTER PRESSURE SENSOR		
	DIESEL PARTICULATE FILTER TEMPERATURE MODULE		
	DIESEL PARTICULATE FILTER TEMPERATURE SENSOR		
	EGR COOLER [DIESEL]		
	AIR FUEL RATIO SENSOR		
	AIR INDUCTION SYSTEM		
	Air injection check valve		
	Air injection control valve		
	Air injection Relay		
	AIR PUMP		
	BAROMETRIC PRESSURE SENSOR		
	CAM SENSOR		
	CANISTER PURGE SOLENOID		
	DECELERATION VALVE		
	DPFE sensor		
	EGR check valve		
	EGR controller		
	EGR diverter valve		
	EGR lines		
	EGR position sensor		
	EGR relay		
	EGR SOLENOID		

EGR/EFE THERMAL VACUUM SWITCH		
EGR/EFE VALVE		
EMISSION DIAGNOSTIC		
ENGINE OIL FILL CAP		
EVAP Leak detection Pump and Valve		
EVAP Purge Canister		
EVAP TANK PRESSURE SENSOR		
EVAP VACUUM/PRESSURE PUMP		
EVAP VENT VALVE		
EXHAUST GAS TEMPERATURE SENSOR		
Fuel Fill Cap		
FUEL FILL NECK RESTRICTOR		
FUEL SENSOR		
FUEL TANK PRESSURE CONTROL VALVE		
Fuel Tank Pressure Sensor		
Fuel Tank Vent Valve		
FUEL TEMPERTURE SENSOR		
GAS ENGINE EGR RECIRCULATION SYSTEM		
Gasoline Catalytic Converter		
IDLE SPEED CONTROL MOTOR		
INTAKE AIR RESONATOR		
INTAKE AIR TEMPERTURE SENSOR		
MAP Sensor		
MASS AIRFLOW SENSOR		
NOX SENSOR		
PCM COOLANT TEMP SENSOR		
PCV SENSOR		
Purge Valve		
THROTTLE POSITION SENSOR		
BEARING(S)		
BOLTS		
CAM TIMING SOLENOID		
CAMSHAFT		
CAMSHAFT BEARING(S)		
CAMSHAFT FOLLOWER(S)		
CONNECTING ROD BEARING(S)		
CONNECTING ROD(S)		
COOLANT		
CRANKSHAFT		

CRANKSHAFT FRONT SEAL ONLY W/REPAIR		
CRANKSHAFT FRONT SEAL standalone		
CRANKSHAFT MAIN BEARING(S)		
CYLINDER BLOCK		
CYLINDER DEACTIVATION SOLENOID		
CYLINDER HEAD [IF CAUSED BY INT LUB PART]		
CYLINDER HEAD GASKET ONLY W/REPAIR		
CYLINDER HEAD GASKET standalone		
DIAGNOSTIC		
DIPSTICK AND TUBE		
ENGINE		
ENGINE BELT TENSIONER		
ENGINE BLOCK - SHORT		
ENGINE BLOCK LONG		
ENGINE MOUNT(S)		
EXHAUST MAINIFOLD GASKET ONLY W/REPAIR		
EXHAUST MAINIFOLD GASKET STANDALONE		
EXHAUST MANIFOLD		
FREEZE PLUG(S)		
GASKET / SEAL KIT ONLY w/ REPAIR		
GASKET / SEAL KIT STANDALONE		
GASKET(S)/ SEAL (S) - TURBO/SUPERCHARGER ONLY W/REPAIR		
GASKET(S)/ SEAL (S) - TURBO/SUPERCHARGER standalone		
HARMONIC BALANCER		
HEAD BOLT(S)		
INTAKE MANIFOLD		
INTAKE MANIFOLD GASKET(S) ONLY W/REPAIR		
INTAKE MANIFOLD GASKET(S) standalone		
INTAKE TUNING ACTUATOR/SOLENOID/MOTOR		
INTAKE TUNING VALVE/FLAP/BUTTERFLY		
MANIFOLD PLATE(OIL PAN)		
OIL		
OIL COOLER		
OIL COOLER LINE		
OIL FILTER		
OIL FILTER ADAPTER/HOUSING		
OIL PAN		
OIL PAN GASKET only ONLY W/REPAIR		
OIL PAN GASKET standalone		

ENGINE

OIL PUMP		
OIL PUMP CONTROL SOLENOID		
OIL PUMP HOUSING		
PCV SYSTEM CAUSE of FAILURE hoses/lines excluded		
PCV VALVE		
PISTON RING(S)		
PISTON(S)		
PULLEYS		
PUSH ROD(S)		
REAR MAIN SEAL ONLY W/REPAIR		
REAR MAIN SEAL standalone		
ROCKER ARM BUSHING(S)		
ROCKER ARM SHAFT(S)		
ROCKER ARM(S)		
SEAL(S) ONLY W/REPAIR		
SEAL(S) standalone		
SEALANT/SEALERS-ENGINE ONLY W/REPAIR		
SEALANT/SEALERS-ENGINE standalone		
SERPENTINE BELT		
TENSIONER(S) - TIMING BELT/CHAIN		
THERMOSTAT		
THERMOSTAT GASKET ONLY W/REPAIR		
THERMOSTAT GASKET standalone		
THROTTLE BODY		
TIMING BELT		
TIMING BELT/CHAIN GUIDE(S)		
TIMING CHAIN		
TIMING CHAIN/BELT COVER		
TIMING CHAIN/BELT IDLER PULLEY		
TIMING GEARS		
VALLEY PAN		
VALLEY PAN GASKET ONLY W/REPAIR		
VALLEY PAN GASKET standalone		
VALVE COVER GASKET(S) ONLY W/REPAIR		
VALVE COVER GASKET(S) standalone		
Valve Cover Oil Fill Cap		
VALVE COVER(S)		
VALVE GUIDE SEAL		
VALVE GUIDE(S)		

	VALVE LIFTER(S)		
	VALVE RETAINER(S)		
	VALVE SEAT(S)		
	VALVE SPRING(S)		
	VALVE(S)		
	WATER PUMP		
	WATER PUMP GASKET ONLY W/REPAIR		
	WATER PUMP GASKET standalone		
	WATER PUMP HOUSING		
	WINDAGE TRAY		
	Air Charge Cooler Water to Air		
	DIAGNOSTIC - TURB/SUPERCHARGER		
	Intercooler/Turbo AIR TO AIR		
	SUPERCHARGER HOUSING		
	TURBO WASTE GATE		
	TURBOCHARGER HOUSING		
	Wastegate/VNT Control Actuator/Motor/Solenoid		
ENGINE COOLING	ACTIVE SHUTTER ACTUATOR/MOTOR		
	ACTIVE SHUTTER MODULE		
	ACTIVE SHUTTERS		
	BELT TENSIONER		
	COOLANT HOSES		
	COOLANT RECOVERY TANK	√	
	COOLING FAN MODULE	√	
	ELECTRIC BOOST COOLING PUMP	√	
	ELECTRIC WATER PUMP	√	
	ENGINE COOLING DIAGNOSTIC	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	ENGINE COOLING FAN MOTOR	√	
	ENGINE FAN BLADE	√	
	FAN CLUTCH		
	HEATER CONTROL VALVE	√	
	HEATER CORE		
	HEATER CORE ELECTRIC/BOOST PUMP	√	
	RADIATOR	√	
	WATER PUMP CONTROL MODULE	√	
	ENGINE FUEL DIAGNOSTIC		
	ETHANOL SENSOR		
	FUEL COOLER		
	FUEL HEATER		

ENGINE FUEL	FUEL INJECTION PUMP		
	FUEL INJECTOR(S)		
	FUEL LINE(S)		
	FUEL PRESSURE REGULATOR		
	FUEL PRESSURE SENSOR		
	FUEL PUMP		
	FUEL PUMP CONTROL MODULE		
	FUEL PUMP RELAY		
	FUEL TANK		
	FUEL TANK SENDING UNIT		
	HIGH PRESSURE PUMP		
	LOW PRESSURE PUMP/LIFT PUMP		
	O RINGS/GASKETS/SEALS ONLY W/REPAIR		
	O RINGS/GASKETS/SEALS standalone		
	VACUUM PUMP		
	WATER IN FUEL SENSOR		
	STEERING	ALIGNMENT	√
COOLER AND COOLER LINES (METAL ONLY)			
COUPLING(S)		√	
DRAG LINK/CENTER LINK			
EVO SENSOR/VARIABLE STEERING SOLENOID		√	
GASKET(S) ONLY W/REPAIR			ONLY IF REQUIRED FOR COVERED REPAIR
GASKET(S) standalone		√	
GEAR(S)		√	
IDLER ARM(S)			
INTERNAL TILT WHEEL MECHANISM		√	
LINKAGE(S)		√	
LOWER STEERING COLUMN COUPLING		√	
LOWER STEERING COLUMN INTERMEDIATE SHAFT		√	
P/S FLUID			
PITMAN ARM(S)			
POWER STEERING CONTROL MODULE		√	
POWER STEERING COULMN CONTROL MODULE		√	
POWER STEERING HOSE(S)			
POWER STEERING MOTOR		√	
POWER STEERING PUMP			
POWER STEERING PUMP OVERHAUL KIT			
POWER STEERING SOLENOID	√		
POWER TILT/HEIGHT STEERING COLUMN MECHANISM	√		

RACK AND PINION GEAR HOUSING	✓	
RACK AND PINION GEAR SHAFT	✓	
RACK AND PINION GEAR(S)	✓	
REAR WHEEL STEERING ACTUATOR	✓	
REAR WHEEL STEERING MODULE	✓	
REAR WHEEL TOE ACTUATOR	✓	
REAR WHEEL TOE CONTROL MODULE	✓	
SEAL(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
SEAL(S) standalone	✓	
STEERING BOX		
STEERING DIAGNOSTIC	✓	FOR FAILURE OF COVERED COMPONENTS ONLY
STEERING KNUCKLE(S)	✓	
STEERING SHAFT	✓	
STEERING TORQUE/FORCE SENSOR	✓	
STEERING WHEEL POSITION SENSOR	✓	
TIE ROD END(S) - INNER	✓	
TIE ROD END(S) - OUTER	✓	
UPPER STEERING COLUMN COUPLING	✓	
UPPER STEERING COLUMN SHAFT	✓	
ACTIVE SWAYBAR ACTUATOR/MOTOR	✓	
AIR SPRINGS		
COIL/LEAF SPRINGS	✓	
ELECTRONIC SWAYBAR DISCONNECT MOTOR/ACTUATOR	✓	
ELECTRONICALLY CONTROLLED SHOCK		
ELECTRONICALLY CONTROLLED STRUT		
HEIGHT SENSOR	✓	
HYDRAULIC SUSPENSION MODULE	✓	
HYDRAULIC SUSPENSION MOTOR	✓	
KINGPIN(S) & BUSHINGS		
LEVEL CONTROL COMPRESSOR/ SUSPENSION PUMP	✓	
LEVEL CONTROL SOLENOID	✓	
LOWER BALL JOINT W/CONTROL ARM	✓	
LOWER BALL JOINT(S)	✓	
LOWER CONTROL ARM - LEFT	✓	
LOWER CONTROL ARM - RIGHT	✓	
LOWER CONTROL ARM BUSHING(S)	✓	
LOWER CONTROL ARM SHAFT - LEFT	✓	
LOWER CONTROL ARM SHAFT - RIGHT	✓	
MODE SELECTOR SWITCH	✓	

SUSPENSION	RADIUS ARM - LEFT	✓	
	RADIUS ARM - RIGHT	✓	
	RADIUS ARM BUSHING(S)	✓	
	RIDE CONTROL MODULE	✓	
	SEAL(S) ONLY W/REPAIR		ONLY IF REQUIRED FOR COVERED REPAIR
	SEAL(S) standalone	✓	
	SPINDLE - KNUCKLE	✓	
	STABILIZER BAR - FRONT	✓	
	STABILIZER BAR - REAR	✓	
	STABILIZER BUSHING(S)	✓	
	STABILIZER LINK(S)	✓	
	STRUT MOUNT(S) - LOWER		
	STRUT MOUNT(S) - UPPER		
	STRUT(S)/SHOCK(S)		
	SUPPORT BEARING(S)		
	SUSPENSION DIAGNOSTIC	✓	FOR FAILURE OF COVERED COMPONENTS ONLY
	TORSION BAR - LEFT	✓	
	TORSION BAR - RIGHT	✓	
	TORSION BUSHING(S)	✓	
	TORSION MOUNT(S) - LEFT	✓	
	TORSION MOUNT(S) - RIGHT	✓	
	UPPER BALL JOINT(S)	✓	
	UPPER CONTROL ARM - LEFT	✓	
	UPPER CONTROL ARM - RIGHT	✓	
	UPPER CONTROL ARM BUSHING(S)	✓	
	UPPER CONTROL ARM SHAFT - LEFT	✓	
	UPPER CONTROL ARM SHAFT - RIGHT	✓	
	WHEEL BEARING(S)	✓	
	ACTUATOR(S)		
	BAND(S)		
BEARING(S)			
BUSHING(S)			
CASE ADAPTER			
CHAIN(S)			
CLUTCH(S)			
COUPLING(S)			
DIAGNOSTIC - TRANSMISSION GROUP			
DRUM(S)			
ELECTRONIC SHIFT CONTROL UNIT			

TRANSMISSION

EXTERNAL SHIFT LINKAGE		
FLEX PLATE - AUTO		
FLUID		
FLYWHEEL - STD		
FORK(S)		
FRONT PUMP		
GASKET / SEAL KIT ONLY w/ REPAIR		
GASKET / SEAL KIT STANDALONE		
GASKET(S) - TRANSFER CASE ONLY W/REPAIR		
GASKET(S) - TRANSFER CASE STANDALONE		
GASKET(S) ONLY W/REPAIR		
GASKET(S) standalone		
GEAR(S)		
INPUT SPEED SENSOR		
LUBRICANT		
MANUAL LEVER POSITION SENSOR		
OIL PAN - TRANSMISSION		
OUTPUT SPEED SENSOR		
OVERHAUL KIT		
PAN GASKET ONLY W/REPAIR		
PAN GASKET STANDALONE		
PISTON(S)		
PLANETARY ASSEMBLY		
PLANETARY GEAR(S)		
PLATE(S)		
PUMP		
RETAINER(S)		
RING(S)		
SEAL(S) ONLY W/REPAIR		
SEAL(S) standalone		
SEALANT/SEALERS - TRANSMISSION		
SEALER/SEALANTS		
SENSOR(S)		
SERVO(S)		
SHAFT(S)		
SHELL(S) - ALL		
SHIFT FORK(S)/RAIL(S)		
SHIFT RAIL(S)		
SHIFT SOLENOID		

SHIM(S)		
SPACER PLATE(S)		
SPACER(S)		
SPRAG(S)		
SPRING(S)		
SPROCKET		
SPROCKET HUB		
SYNCHRONIZER RING(S)		
SYNCHRONIZER(S)		
THRUST WASHER(S)		
TORQUE CONVERTER		
TRANS-DIPSTICK TUBE		
TRANSMISSION ASSEMBLY		
TRANSMISSION COOLER		
TRANSMISSION COOLER LINES		
TRANSMISSION HARNESS		
TRANSMISSION MOUNT(S)		
VALVE BODY		
VALVE(S)		
WASHER(S)		
YOKE/FLANGE		
TRANSFER CASE		
TRANSFER CASE ASSEMBLY		
SWITCH - 4X4		

EV SPECIFIC

AIR CONDITIONING	Heat Pump	√	
	High Voltage A/C Compressor	√	
	PTC Heater	√	
Battery Management	Battery Cell Monitor Unit/Module/Sensor	√	
	Battery Energy Control Module	√	
	Battery Leakage-of-Electricity Sensor	√	
	Battery Management Diagnostic	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	Battery Management Unit/ECU	√	
	Battery Temperature Sensor(s)	√	
	Battery Voltage Sensor(s)	√	
	Manual Disconnect/Isolation Gasket/Seal		
Pyro Fuse/DC Fuse			
	Battery Chiller	√	
	Battery Coolant Heater	√	

COOLING	Battery Cooling Fan(s) Assembly	√	
	Battery Cooling Unit	√	
	Heat Exchanger	√	
	OBCM Fan(s)	√	
ELECTRIC DRIVE UNIT	Clutch pack(s)	√	
	Coolant	√	ONLY IF REQUIRED FOR COVERED REPAIR
	Damper	√	
	Differential(s)	√	
	Drive Unit Mounts/Bushings	√	
	Electric Drive Unit Case Sealant/Gasket	√	
	Electric Drive Unit Case/Gearbox	√	
	Electric Drive Unit Counter Shaft	√	
	Electric Drive Unit Diagnostic	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	Electric Motor Drive Shaft	√	
	Electric Motor Sensors/Switches	√	
	Front Electric Drive Unit	√	
	Gear Reduction Unit	√	
	Generator	√	
	Induction/Permanent Magnet Rotor	√	
	Input Shaft	√	
	Motor Counter Drive Gear	√	
	Motor Speed Reduction Shaft	√	
	Oil	√	ONLY IF REQUIRED FOR COVERED REPAIR
	Oil Pump	√	
	Peak Torque Limiter	√	
	Pinion Shaft	√	
	Planetary Carrier	√	
	Rear Electric Drive Unit	√	
	Reducer/Transaxle	√	
	Sprag Gear	√	
	Sprag Support	√	
	Stator Assembly	√	
Stator Housing Cover			
ELECTRICAL	ELECTRIC MOTOR WIRING HARNESS	√	
	Accessory Power Module/Unit - DC/DC Converter	√	
	Charge Port Controller	√	
	Charge Port Door Assembly	√	
	Charge Receptacle/Port	√	
	High Power Distribution Module	√	

High Voltage Electrical	HIGH VOLTAGE CABLES (ALL)	√	
	High Voltage Electrical Diagnostic	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	Inverter/Converter Assembly	√	
	Inverter/Converter System Controller	√	
	On Board Charging Module (OBCM)	√	
	Power Relay Assembly	√	
	Rapid Splitter/Junction Block	√	
High Voltage Battery	Battery Disconnect Relay/CONTACTOR	√	ONLY WITH EV+BATTERY COVERAGE
	Battery Cell Module	√	ONLY WITH EV+BATTERY COVERAGE
	Battery Duct(s)/Vent(s)	√	ONLY WITH EV+BATTERY COVERAGE
	Battery Vent Manifold	√	ONLY WITH EV+BATTERY COVERAGE
	High Voltage Battery Cables	√	ONLY WITH EV+BATTERY COVERAGE
	High Voltage Battery Connector(s)	√	ONLY WITH EV+BATTERY COVERAGE
	HIGH VOLTAGE TRACTION BATTERY ASSEMBLY	√	ONLY WITH EV+BATTERY COVERAGE
	Manual Disconnect/Isolation Base/Connector	√	ONLY WITH EV+BATTERY COVERAGE
	High Voltage Battery Diagnostic	√	FOR FAILURE OF COVERED COMPONENTS ONLY
	Battery Harness	√	
	Battery Sealing Gasket		
	BATTERY COVER/CASE/SHIELD		